


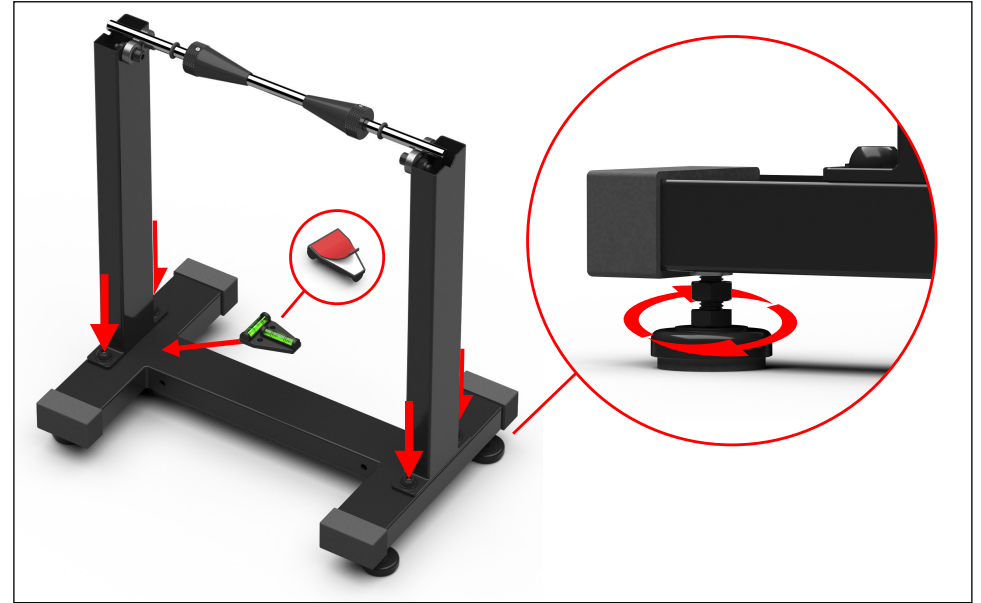

1. Wheel balancer assembly

To assemble the wheel balancer remove all the parts from the packaging and place the balancer body on a flat surface. Use the included allen key and screws to **attach both arms to the balancer body** and tighten all four screws firmly. Then remove the adhesive film on the back of the spirit level and place it on the top surface of the balancer body.

Before first use and each time the balancer is moved, it is necessary to **adjust the screw feet** of the balancer so that it is in balance according to the spirit level and **adjust the position of the cones on the axis** according to the width of the wheel being balanced using the smaller allen key.



2. Wheel balancer use

Make sure that the balancer is **leveled properly** using the bubble of the spirit level on the balancer body. Remove the balancer axis and place the motorcycle wheel on it so that the cones secure the wheel on both sides. Place the axis with the wheel loosely on the balancer arms. The wheel will rotate very easily and freely. After balancing the wheel, remove the wheel again in the same way. The SEFIS moto wheel balancer is **intended for professional use**; the manufacturer is not responsible for the consequences caused by improper use of the balancer.

